


## Conceptual Ozone Diagram for Pharmaceutical Application

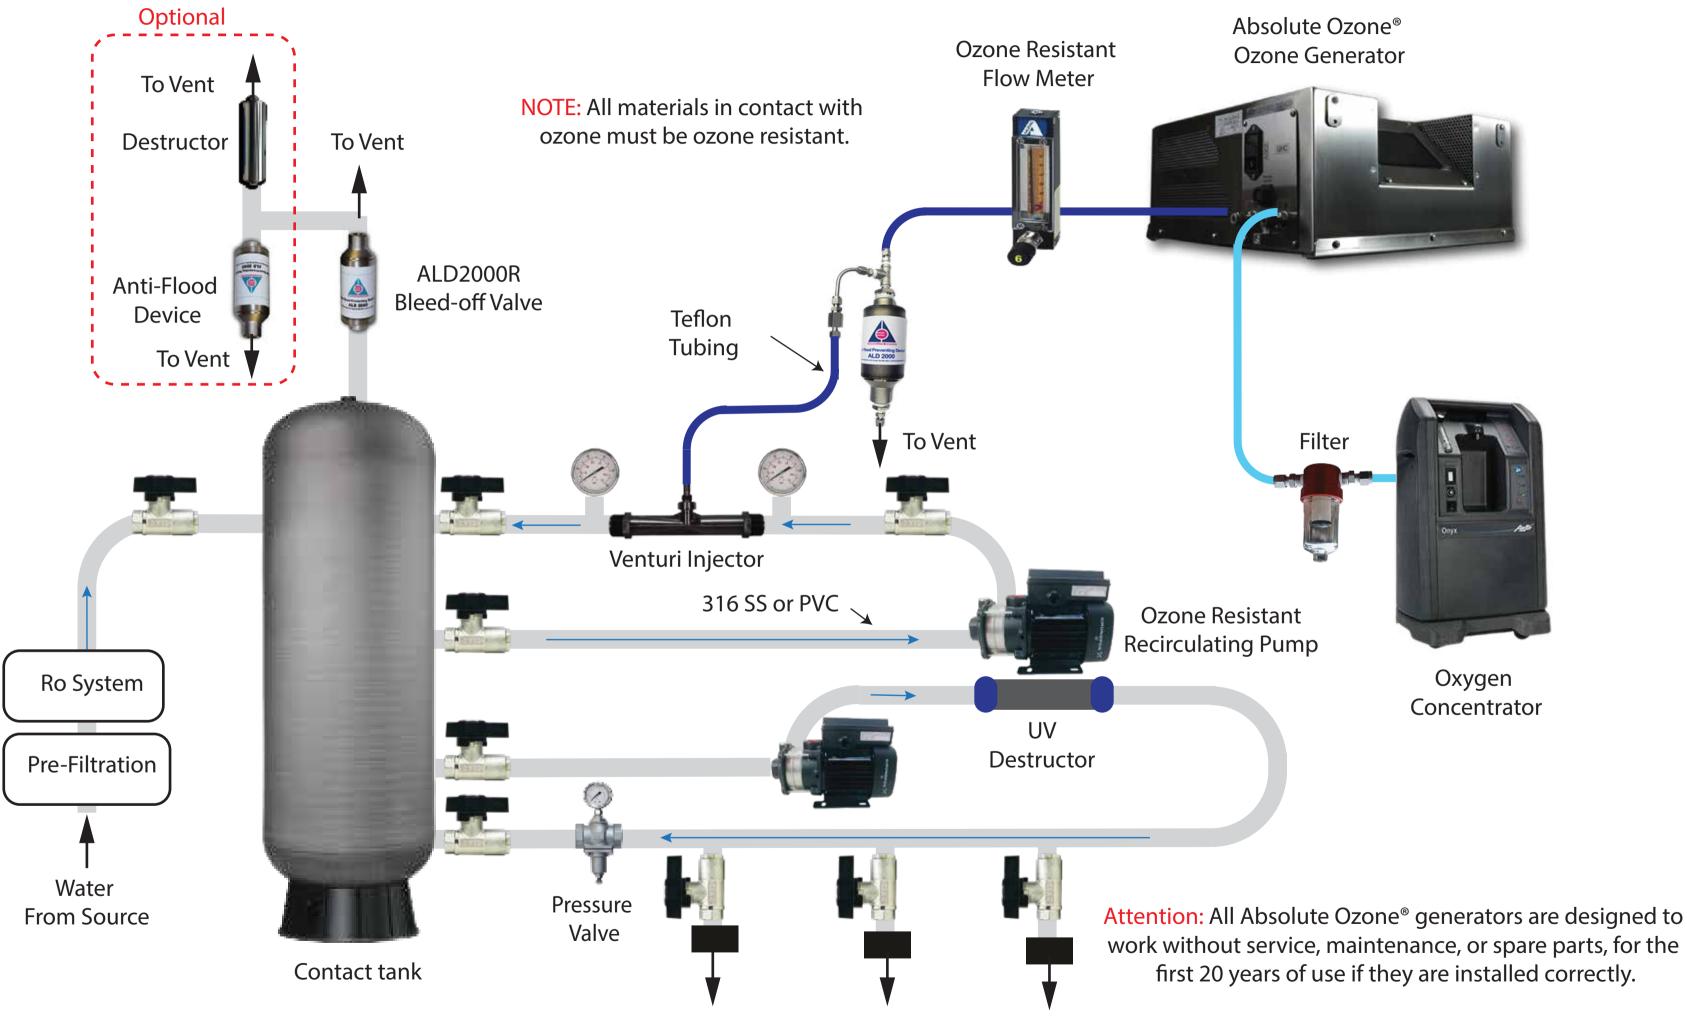

To Laboratory Water System

For a good generator performance, it is important to place the generator in a well-ventilated, dust free environment, and maintain the ambient temperature at 20-22°C